

Radar Target Simulator, Level Setting, 81 to 86 GHz

Description:

Model STR-843-12-L1 is a radar doppler simulator that operates at 83.5 GHz with a bandwidth of ±2.5 GHz and a WR-12 waveguide input/output. The simulator utilizes a single-sideband-modulator to modulate the incoming signal transmitted by the radar under test and sends back either a higher or lower band signal through a diplexer. The frequency-shifted signal is



transmitted back to the radar under test as the Doppler signal. Target characteristics can be adjusted by changing the I and Q channel frequency and phase. The routing attenuation is adjusted by the level setting attenuator, which can be calibrated to simulate the radar cross section (RCS).

Features:

- Single Sideband Output
- Simulated Target Speed and Size Adjustable
- Simulated Target Moving Direction Switchable
- Instrumentation Grade

Applications:

- Doppler Target Simulations
- Radar Systems

Electrical Specifications:

Parameter	Minimum	Typical	Maximum
Center Frequency		83.5 GHz	
RF Bandwidth		±2.5 GHz	
Carrier Rejection		30 dB	
Image Rejection		20 dB	
Routing Loss Range	[7]	30 to 80 dB	
I/Q Frequency Range	DC		250 MHz
I/Q Voltage		±10 V _{p-p}	±12 V _{p-p}
I/Q Current		±2.5 mA	±5 mA
I/Q Phase Error		±5°	
Specification Temperature	Millins	+25 °C	10.0
Operating Temperature	+0 °C	CLCI,	+50 °C

Mechanical Specifications:

Item	Specification
RF Port	WR-12 Waveguide with UG-387/U Anti-Cocking Flange
I/Q Ports	SMA(F)
Finish	Black Anodized
Size	7.56" (L) x 4.89" (W) x 1.90" (H)
Outline	TR-EL-2




www.eravant.com | 501 Amapola Avenue, Torrance, CA 90501 Phone: 424-757-0168 | Fax: 424-757-0188 | Email: support@eravant.com



Radar Target Simulator, Level Setting, 81 to 86 GHz

Mechanical Outline: (Unless otherwise specified, all dimensions are in inches [millimeters])

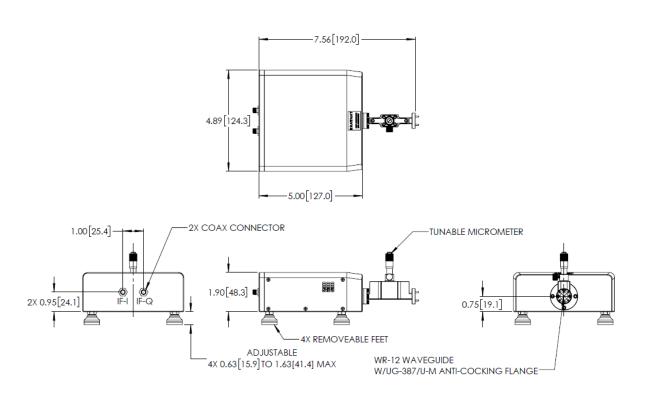

Note:

- Eravant reserves the right to change the information presented without notice.
- Models with different operation frequencies are available under a different model number.
- The 83.5 GHz Radar Target Simulator with a **direct reading attenuator**, instead of a level setting attenuator, is available as model **STR-843-12-D1**.

Caution:

- Exceeding absolute maximum ratings will damage the device.
- Any foreign objects in the waveguide will cause performance degradation and may damage the device.
- Proper torque, 8.0 ± 0.15 inch-pounds (0.92 ± 0.05 Nm), should be applied. **Eravant torque** wrench, model SCH-08008-S1, is highly recommended.



www.eravant.com | 501 Amapola Avenue, Torrance, CA 90501 Phone: 424-757-0168 | Fax: 424-757-0188 | Email: support@eravant.com